


For direct mounting on  
 • TNK Hyva tank mounting plate

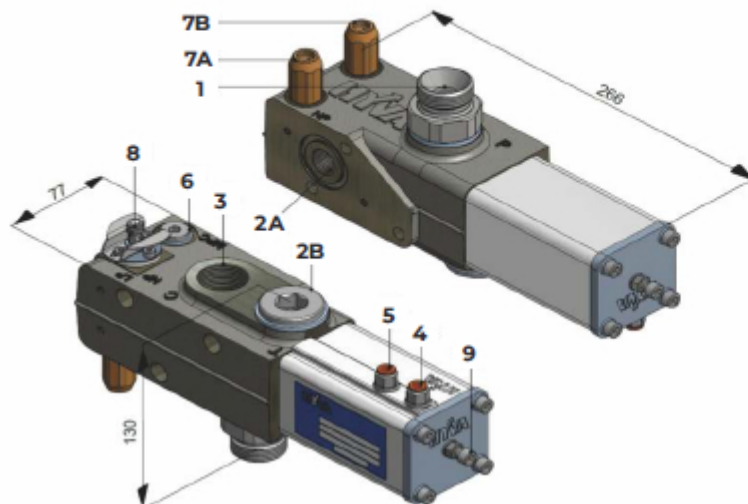

- |    |     |                                                             |
|----|-----|-------------------------------------------------------------|
| 1  | P   | Pump connection                                             |
| 2A | T1  | Tank connection                                             |
| 2B | T2  | Alternative tank connection                                 |
| 3  | C   | Cylinder connection                                         |
| 4  |     | Pneumatic connection (Tip) 6 mm                             |
| 5  |     | Pneumatic connection (Lower) 6 mm                           |
| 6  | MPC | Measure Pressure Cylinder (Pressure gauge point)            |
| 7A |     | Pressure relief cartridge (HP)                              |
| 7B |     | Pressure relief cartridge (LP)                              |
| 8  |     | Manual pressure selector                                    |
| 9  |     | Adjustment screw (int.hex 5) (To adjust the lowering speed) |

#### HYDRAULIC SYMBOL

