


For direct mounting on

- TNK Hyva tank mounting plate

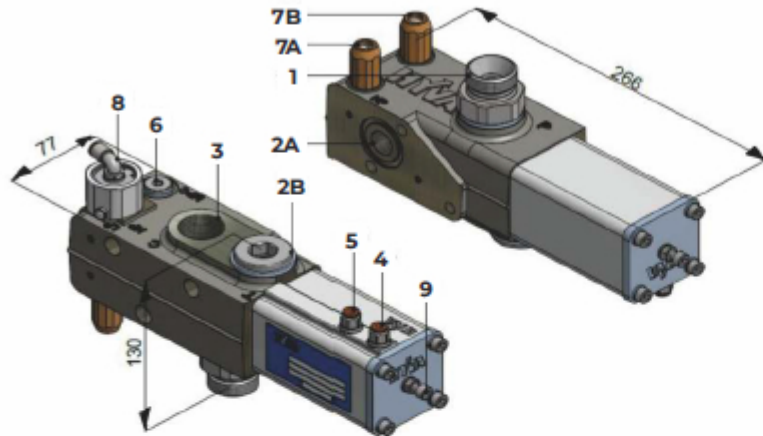

- | | | |
|----|-----|-------------------------------------------------------------|
| 1 | P | Pump connection |
| 2A | T1 | Tank connection |
| 2B | T2 | Alternative tank connection |
| 3 | C | Cylinder connection |
| 4 | | Pneumatic connection (Tip) 6 mm |
| 5 | | Pneumatic connection (Lower) 6 mm |
| 6 | MPC | Measure Pressure Cylinder (Pressure gauge point) |
| 7A | | Pressure relief cartridge (HP) |
| 7B | | Pressure relief cartridge (LP) |
| 8 | | Air switch (AS) 6 mm |
| 9 | | Adjustment screw (int.hex 5) (To adjust the lowering speed) |

HYDRAULIC SYMBOL

